 


#1 To a portable player via Headphone jack or line out.

All hard drive & CD players provide a headphone jack.* An RCA to Mini Cable will allow you to connect the headphone jack/line out of your player into the RCA inputs on the Portable Desktop and a mini to mini cable will allow you to connect to the mini outputs on the Portable Desktop. Be sure to note that as always, red or 'R', designates right channel on RCA inputs. On the front panel, switch the Source Selector Switch to analog.

 
*Use line out if your player has it. Line out bypasses the player's volume control completely; use the amp's instead.

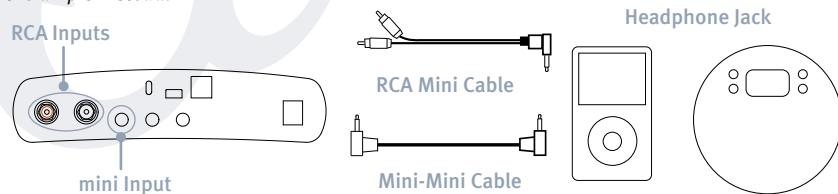

#2 To a home CD player or other Analog Sources via RCA outputs


If your source has RCA outputs, an RCA to RCA interconnect cable will connect the Portable Desktop. Plug the RCA inputs into the back of the Portable Desktop Amp, and connect the other end to the line output of your analog source. If your source only has an 1/8in line out or a headphone jack, then go up to #1. If your CD player has digital outputs, skip to the next page.

- Switch the Source Selector Switch to *analog*.
- Switch Analog Input Switch to *unbalanced*.

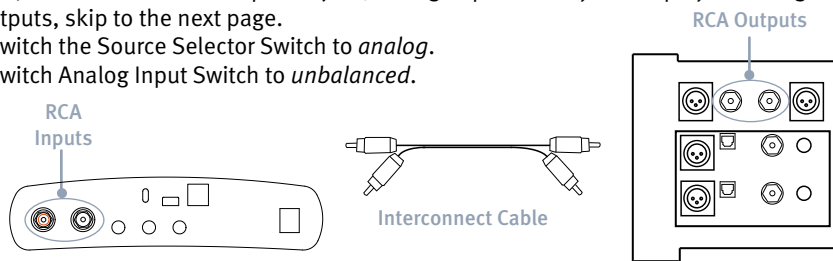

#3 Using Self Powered Speakers with the Desktop Portable

 Most self-powered speakers have RCA inputs, in which case you will use a 1/8in mini to RCA cable to attach to the Portable Desktop Amp. Attach the cable to the pre-amp output on the rear of the Portable Desktop Amp. Plug the other end into the input of your speakers.

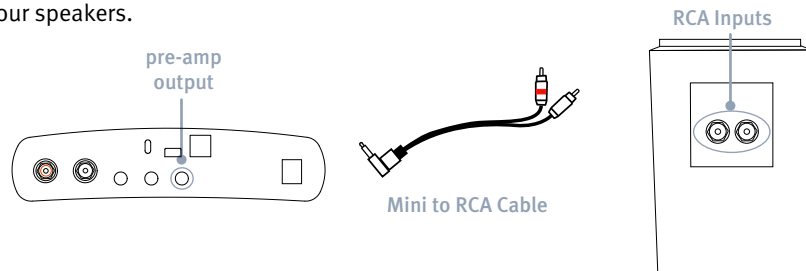


#4 DAC Option: To your Computer or other digital source via USB, coaxial, or optical output

Connecting to your Computer:

The most convenient and common way to get a high quality signal out of your computer or UMPC is with the USB output. (If you have optical or coaxial outputs on your machine, then skip to the next section.) Simply plug a USB cable into your computer, and plug the smaller end into the back of the amp. In most cases your computer will instantly recognize the amplifier, but you will need to restart your music management program. If your computer does not recognize the device, restart; if it still is not recognized, you may need to go into your control panel/audio devices or system preferences/sound output and select 'USB Audio Codec' as your default audio device.

 
- Switch the Source Selector Switch to *'digital'*.
- Switch the Digital Input Selector Switch to *'USB'*.

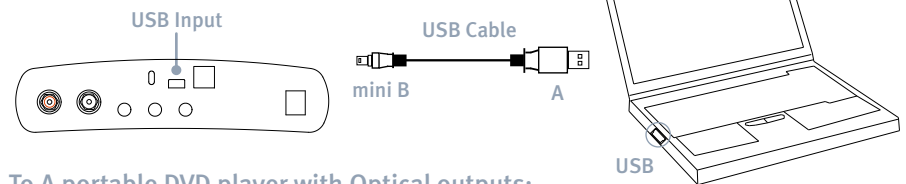

To A portable DVD player with Optical outputs:

You will need an appropriate optical cable, visit headphone.com to purchase a cable. Plug one end into your source and connect the other end into the appropriate input on the back of the amp.

 - Switch the Source Selector Switch to *'digital'*.
- Switch the Digital Input Selector Switch to *'optical'*.

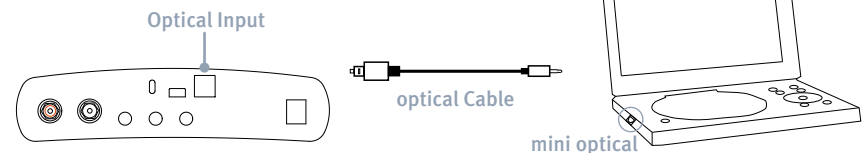

To A home CD player with Optical/Coaxial outputs:

You will need an appropriate coaxial or optical cable, visit headphone.com to purchase a cable. Plug one end into your source and connect the other end into the appropriate input on the back of the amp.

- Switch the Source Selector Switch to *'digital'*.
- Switch the Digital Input Selector Switch to *'coaxial'* or *'optical'*.

